


~ MANUAL STACK - Visibility and Resetting ~

Locating structures with manually stacked parts and changing the structure to automatic stacking can now be done quickly in the Build - Component screen. This eliminates the need to select a structure and open the Stack screen to check or reset the stacking mode to automatic.

When a structure has manually stacked parts, the Build - Component screen will display the word "Manual" in the Height field, with a Gray background, for that assembly position.

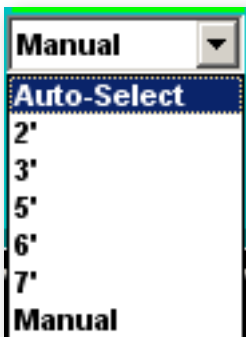

To reset an assembly position for automatic stacking, click the assembly position's Height field on the Build - Component screen and select a height other than "Manual".

When the structure is stacked, the position will return to the automatic stacking mode, and the Build - Component screen part selection will be used (replacing the manual stack changes).

Helpful Hint:

You can easily scan through an entire quote to see which structures have manual stack adjustments with the following simple procedure.

While in the Build - Component screen:

- Click on the structure identifier to highlight it.
- Observe the component panel to see any structures with manual stacking.
- Press the Down (or Up) arrow on the keyboard to move to the next structure.

A Customer Focused Corporation...

Phone: 253-927-8520 E-mail: info@stackit.net Web: www.stackit.net